



NO	HHAW PARTS NO			Q' TY/ UNIT	PARTS NAME
	RAC-18WEF	RAC-25WEF	RAC-35WEF		
1		HWRAC-18WED A01		1	BASE
2		HWRAC-18WED A02		1	COMPRESSOR
3		HWRAC-18WED A03		3	COMPRESSOR RUBBER
4		HWRAC-18WEB A04		3	PUSH NUT
5	HWRAC-18WED A04		HWRAC-35WED A01	1	CONDENSER
6	HWRAC-18WEF A01		HWRAC-35WEF A01	1	REVERSING VALVE
7		HWRAC-50WEA A06		1	2S-VALVE
8		HWRAC-10GH5 A03		1	3S-VALVE
9		HWRAC-18WEB A07		1	O. L. R COVER
10		HWRAC-18WEF A02		1	CONNECTING CORD (COMP)
11		HWRAC-D10EX A08		1	THERMISTOR (DEFROST)
12		HWRAC-X18HAK A03		1	THERMISTOR SUPPORT
13		HWRAC-50WED A03		1	ELECTRIC EXPANSION VALVE
14		HWRAC-50WED A07		1	COIL (EXPAN. VALVE)
15		HWRAC-18WEB A33		1	PARTITION
16		HWRAC-18WED A07		1	REACTOR
17	HWRAC-18WED A08		HWRAC-35WED A03	1	FAN MOTOR SUPPORT
18		HWRAC-50WED A10		1	FAN MOTOR
19		HWRAC-18WED A09		1	PROPELLER FAN
20		HWRAC-25YH4 A24		1	NUT (PROPELLER. FAN)
21		HWRAC-18WED A10		1	SIDE COVER (L)
22		HWRAC-18WED A11		1	FRONT COVER
23		HWRAC-18WED A12		1	DISCHARGE GRILL
24		HWRAC-K10HCG A11		1	ELECTRIC PARTS PLATE
25		HWRAC-18WEF A03		1	ELECTRIC PARTS COVER
26		HWRAC-50WED A16		1	TERMINAL BOARD (5P)
27		HWRAC-18WEF A04		1	HEAT SINK
28		HWRAC-25WXD A11		2	FUSE (3. 15A)
29	HWRAC-18WEF A05	HWRAC-25WEF A01	HWRAC-35WEF A02	1	P. W. B. (MAIN)
30		HWRAC-18WEF A06		1	FUSE (15A)
31		HWRAC-18WEF A07		1	SUPPORT (P. W. B. )
32		HWRAC-18WED A15		1	COVER (OUTDOOR THERMISTOR)
33		HWRAC-D10EX A17		1	THERMISTOR (OUTDOOR TEMP. )
34		HWRAC-18WED A16		1	EV-COV-ZU
35		HWRAC-18WED A17		1	T-COVERZU
36		HWRAC-25YHA4 A50		1	DRAIN PIPE
37		HWRAC-18WED A18		1	TERMINAL COVER
38		HWRAC-18WED A19		1	SOUND PROOF COVER ASS' Y
39	HWRAC-18WEF A08		HWRAC-35WEF A03	1	SOUND PROOF COVER ASS' Y
40		HWRAC-K10HCG A18		1	SOUND PROOF COVER ASS' Y
41		HWRAC-18WEB A30		1	SOUND PROOF COVER ASS' Y
42		HWRAC-18WPC A07		1	COIL (REVERSING VALVE)
43		HWRAC-18WED A20		1	SIDE COVER (R)
44		HWRAC-18WEF A09		1	FUSE (15A)